


DIAGRAM

AG 4R

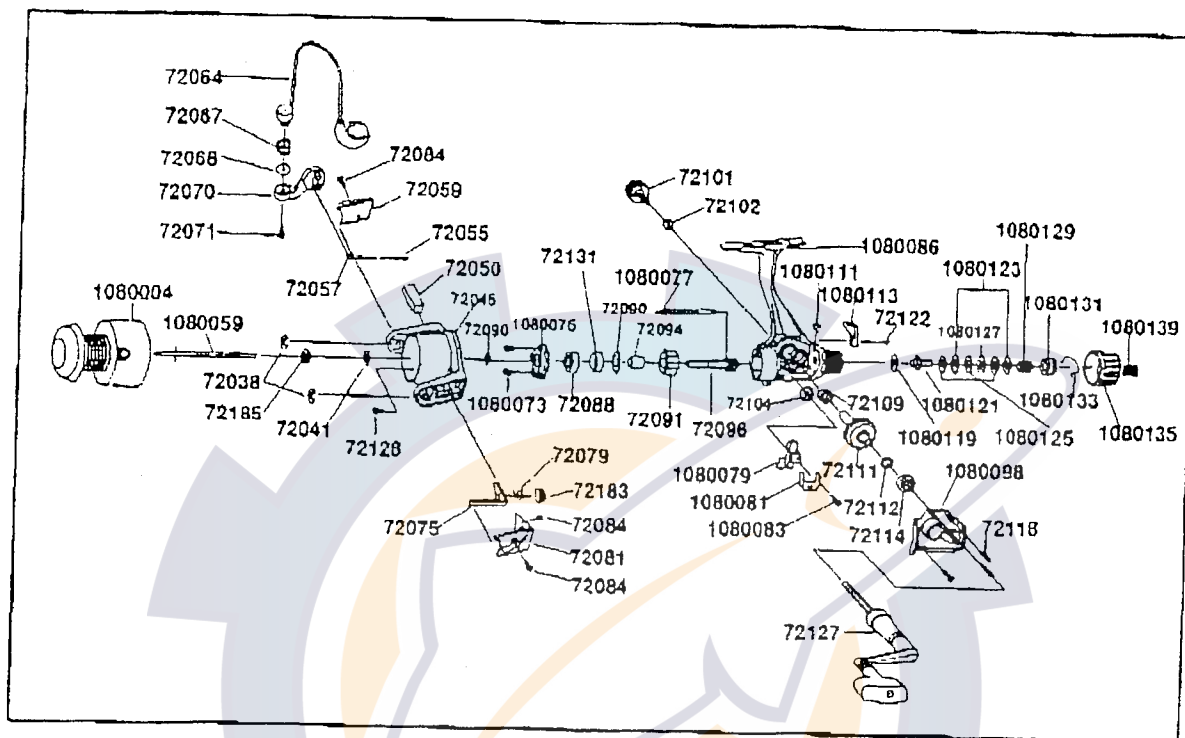

PART LIST

PART NO	PART NAME	PART NO	PART NAME	PART NO	PART NAME
1080004	SPool assy	72067	Line roller	1080111	Stoper lever spring
1080059	Main shaft	72064	Bail assy	72102	Handle sc. cap.wshr.
72038	E-Clip	72071	Bail screw	72101	Handle sc. cap
72185	Roter-nut	1080073	Bearing plate screw	1080113	Stoper lever
72041	Roter D washer	1080075	Bearing plate	72122	Stoper lever sc.
72128	Roter nut lock screw	72088	Ball bearing	1080119	Drag "E" washer
72045	Roter	72096	Pinion gear	1080121	Metal
72075	Kick lever	1080077	Tail shaft	1080123	Drag "A" washer
72079	Kick lever spring	72104	O/S gear	1080125	Drag "B" washer
72183	Kick lever plate	1080079	O/S slider	1080127	Drag "D" washer
72084	Kick lever screw	1080081	O/S slider retainer	1080129	Drag spring
72084	Kick lever cover screw	1080083	O/S slider screw	1080131	Drag nut
72081	Kick lever cover	1080086	Body	1080133	Back claw spring
72050	Roter balance	72109	Body bushing	1080135	Rear drag cap
72057	Bail spring shaft	72111	Drive gear	1080139	Rear drag cap sc.
72055	Bail spring	72112	Adj washer	72091	One way clutch
72059	Bail spring cover	72114	Body cvr. ball bearing	72094	One way clutch bush
72084	Bail sp. cvr. sc.	1080098	Body cover	72090	Bearing washer
72070	Arm lever	72118	Body cvr. sc.	72131	B/Bearing bush
72068	Ball washer	72127	Handle assy		